



## 1. Mount the Brackets

Attach the brackets to the window architrave, wall or ceiling, as shown. Place recess fit brackets about 10mm from the front of the reveal. The most common fitting is into the window architrave (timber), you can screw directly into it with a Phillips head cordless drill. If you are fitting into plaster you will need to secure the screws into studs, otherwise you will be required to use a 10mm hollow grip wall anchor (not included). For a fit into concrete, stone, brick, or tile you will need a masonry drill and appropriate plugs, anchors or screws.

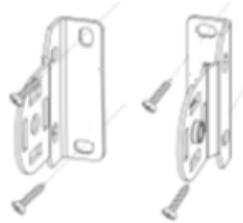


Face Fit

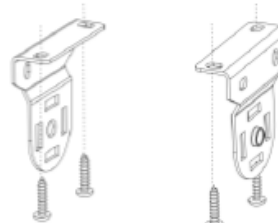

Recess Fit

## 2. Install the Blind

- a. Put the spring loaded pin into the round hole of the bracket.
- b. Keeping the pin end secured in its bracket, insert the hook arms on the clutch straight into the two hook arm receiver holes of the bracket. Once the two hook arms are through the holes, gently pull down on the clutch until the two hook arms have locked securely to the bracket. The bottom of the clutch should

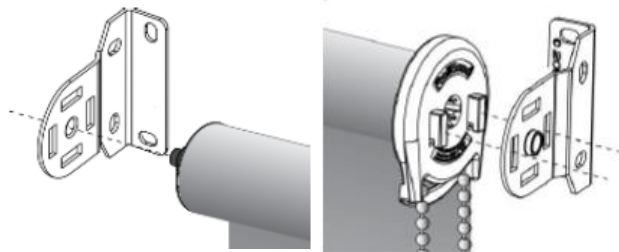

always point straight down. If you ordered bracket covers, you can now slide them on each side, they should snap into place over the brackets. Attach the small plastic ball chain stopper onto the chain so that it can't be rolled past its limit.



## 3. Install Child Safety Device – **Important**

The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the tension device that is attached to the shade's control cord, to the window frame or wall, so that young children cannot pull the cord around their necks. **The cord must not form a loop equal to or greater than 220mm, less than 1600mm from the floor level.**

The cord retaining device must be installed at the maximum vertical distance possible from the control mechanism to prevent looped cord(s) becoming too slack. Place retaining device on the architrave and mark the position of the hole using a pencil. Attach retaining device, if fixing into plaster or brick ensure you are using the appropriate plugs, anchors otherwise the device could come loose defeating its purpose. Ensure the device is fully closed.

