


NOTE: Ensure you follow the track joining instructions if you track came with a joiner.

#### Fully charge the battery pack first!

- Before starting to program, please ensure the Battery pack is fully charged (otherwise errors could occur during set up).
- Important hang the Curtain on the track before commencing any programming functions.
- On the bottom of the motor you will notice a small hole on the opposite side to the power cord, the programming button is inside this hole.

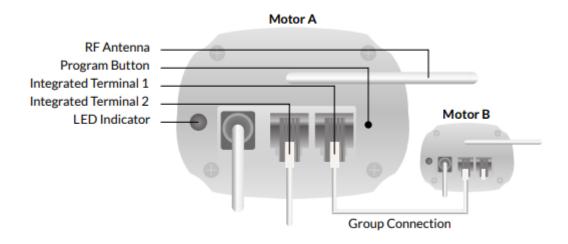

## Step One: Pairing the Motor to the Remote

- 1. Select the channel that you want to pair the motor with on the remote control.
- 2. Using a paperclip or small screwdriver push and hold the programming button (located on the bottom of the motor) for approximately 1 second. The light on the motor will slowly flash red.
- 3. Push the UP button on the remote control. The light will change from flashing red to 3 blue flashes, indicating that pairing was successful.

# Optional: Changing Motor Direction

Note: The UP button should be used to open the curtain, and the DOWN button to close the curtain.

- 1. Check the direction. If the direction is correct there is no action required (move to Limit Setting).
- 2. If the direction is wrong, push and hold the STOP button for approximately 5 seconds, until the light starts flashing red slowly. Within 10 seconds push the STOP button again. The light will change from flashing red to 3 blue flashes, indicating that the change of direction was successful.
- 3. Test the curtain- the direction should now be correct.



### Step Two: Limit Setting

#### Please make sure you hang the curtain before attempting to set limits

Run the Curtain Track in both directions using the remote control. When the master carrier reaches either end of the track, that end limit is automatically stored.

You will find that the curtain should run to the stoppers on your track by using the automatic limit setting when first setting the motor up. Fine adjustment of the limits tends to be off, and we recommend to first try a factory reset of the motor and begin from the start if your curtain was interrupted at some point when initially setting the limits, this should correct any limit setting issues.

## Fine Adjustment of Limits

This sequence needs to be done with no more than 20 seconds between commands, otherwise the motor will exit limit setting mode. You can 'fine adjust' end limit by:

- 1. Go to the limit you would like to adjust.
- 2. Push and hold the PROGRAM button on the remote control until the blue light on the motor flashes 3 times.
- 3. Using the UP and DOWN buttons on the remote control, move the master carrier to the position you would like the curtain to stop.
- 4. Push and hold the PROGRAM button on the remote control until the blue light on the motor flashes 3 times, indicating the limits have now been adjusted.
- 5. Test the curtain.

## Resetting a Motor Back to Factory

- 1. Should you need to reset a motor back to Factory Settings you will need to push and hold the Program Button on the bottom of the Motor for approximately 5 seconds, the light on the motor will slowly flash Red and then flash Red quickly.
- 2. Within 10 seconds push and hold the Programming Button on the Bottom of the motor again, the light will stop flashing and turn solid Blue indicating that the motor has been returned to factory and has deleted all channels and limits

### To Delete a Channel or a Remote

- 1. Press and hold the STOP button for approximately 5 seconds. The light on the motor will slowly flash red.
- 2. Press and hold the DOWN button on the remote, the blue light will flash 3 times, indicating the channel or remote has been deleted.

### **DC Curtain Battery Motor Programming Instructions**



### Turning the Touch Motion Function On and Off

Using a paperclip or small screwdriver, press and hold the PROGRAMMING button on the bottom of the motor for approximately 10 seconds in total. After 3 seconds, the light on the motor will flash red once. After 6 seconds, it will flash red again. Finally, the light will flash blue, indicating that the feature has been turned off/on.

### To Add Multiple Curtains to a Group Channel

**Example: Putting 5 Curtains all on Channel Six.** 

- 1. Go to Blind 1 on Channel 1 on the remote- push and hold the STOP button for approximately 5 seconds. The light on the motor will slowly flash red.
- 2. Go to Channel 6 on the remote control, push the UP button. The light will change from flashing red to 3 blue flashes, indicating that pairing was successful. Curtain 1 has now been added to Channel 6.
- 3. Go to Curtain 2 on Channel 2 on the remote- push and hold the STOP button for approximately 5 seconds. The light on the motor will slowly flash red.
- 4. Go to Channel 6 on the remote- push the UP button. The light will change from flashing red to 3 blue flashes, indicating that pairing was successful. Curtain 2 has now been added to Channel 6.

Repeat these steps until you have moved all curtains over to Channel 6. This feature can also be used to transfer motors onto other remote controls.

Silent Glide battery motors have a low power feature that greatly extends battery life. When this feature is operational, a slightly longer push of the buttons on the remote is required (approximately 1 second). The longer push wakes up the receiver in the motor and the curtain will operate as normal