


1. Choose Recess or Face Fit

A Recess Fit (Inside Mount) fits on the inside of the window casing. A Face Fit (Outside Mount) hangs on the architrave above the window, or on the wall above the window. We recommend a Recess Fit whenever possible.


Choosing Recess Fit

- Number one mount type chosen, higher aesthetics than face mounted
- Give your window a clean, simple look
- Highlight attractive window architraves
- Make your windows appear slimmer and your walls more spacious

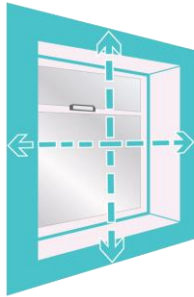

Choosing Face Fit

- Minimise light gaps and offer more privacy
- Make your window appear larger
- Hide windows that are crooked or unattractive
- Clear obstructions in the window recess (like winders, knobs, etc) that would interfere with a Recess Fit

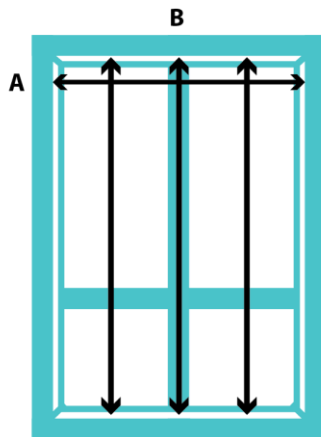

2. Measuring for 25mm Aluminium Venetian Blinds

Your Measurements are covered* by our **SureFit™ Guarantee**

If you need to ask any questions, call, talk with us via live chat, or send us an e-mail, we'll be happy to help

Recess (Inside Fit) 25mm Aluminium Venetian Blinds

First, determine if you have enough **depth** to mount the blind.

60mm is Sufficient, less will result in the blind protruding out of the recess. Minimum depth required is 30mm.


Watch out for any obstructions within the recess such as window winders, knobs, handles, etc.

- A.** Measure the width in mm on the inside of the window frame from left side to right side. Make sure to measure at the top of the reveal and not the bottom of the window, as this is where your brackets will be mounted
- B.** Measure the drop in mm from the top of the inside recess to the base of the inside sill in 3 places – Left, Centre, Right and take the smallest of the three measurements

Important DO NOT make any deductions or allowances on your **Recess Fit** measurements as our factory will do this to ensure a perfect fit

Face (Outside Fit) 25mm Aluminium Venetian Blinds

Watch out for any obstructions such as a protruding window sill, desk, beds, et cetera when deciding where your blind will drop too. For Face Fit, we will make your blind including brackets to your exact measurements you give us.

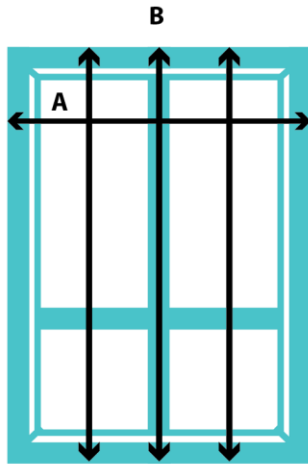

- A.** Measure the width in mm from the outer edge of the architrave to the opposite edge
- B.** Measure the drop in mm from the top of the architrave to where you want the blind to finish in 3 places – Left, Centre, Right and take the smallest of the three measurements
- For shorter drop windows** we recommend that you take the blind 50-100mm below the sill
- For full length windows** we recommend that you measure to 15mm off the floor

If you do not have Architraves around your Window

- A.** Measure the width of the opening and add 30-100mm to allow the blind to go past the opening, this will provide better light and privacy control
- B.** Measure the drop of the opening from the top to where you want your blind to finish, in 3 places – Left, Centre, Right and take the smallest of the three measurements
- For shorter drop windows** we recommend that you take the blind 30-100mm below the sill
- For full length windows** we recommend that you measure to 15mm off the floor
- Then add 30-100mm** so that the blind can be mounted above the opening

Aluminium Venetian Measuring Worksheet

Room Name	Width (mm)	Drop (mm)	Aluminium Slat Size (25mm or 50mm)	Fitting Option (Inside or Outside)	Control Side (Left or Right)	Colour	Notes

Measuring points to remember

1. Always use a **metal tape measure**, a cloth tape measure will not be accurate
2. We require all of your measurements in **millimetres**
3. Measure **width then drop** in this order, try not to get these mixed up
4. Measure every window, there might be slight variations even if they are duplicate windows and this could affect your window furnishings fitting perfectly
5. Do not take your measurements from house plans as they are not accurate
6. If measuring with a partner, make sure the measurements are repeated out loud as they are written down
7. Double, and triple check all details are correct before ordering to avoid delays if we have to replace any of your products, **remember not to deduct anything off any Recess Fit measurements** as our factory will do this to ensure a perfect fit
8. For your reference, architraves are the timber frame or otherwise known as window trims around your window opening