


1. Follow Installation Instructions from the Single Roller Blind PDF File
2. Before Inserting the Roller Blinds onto the brackets, Attach the Chain Diverter. It will slide onto the notch on the bracket horizontally as explained in the diagram below, there is a L and a R chain diverter included, only one side needs to be attached (whatever side your chains are on). This is required so the chain does not hit the blind underneath it.

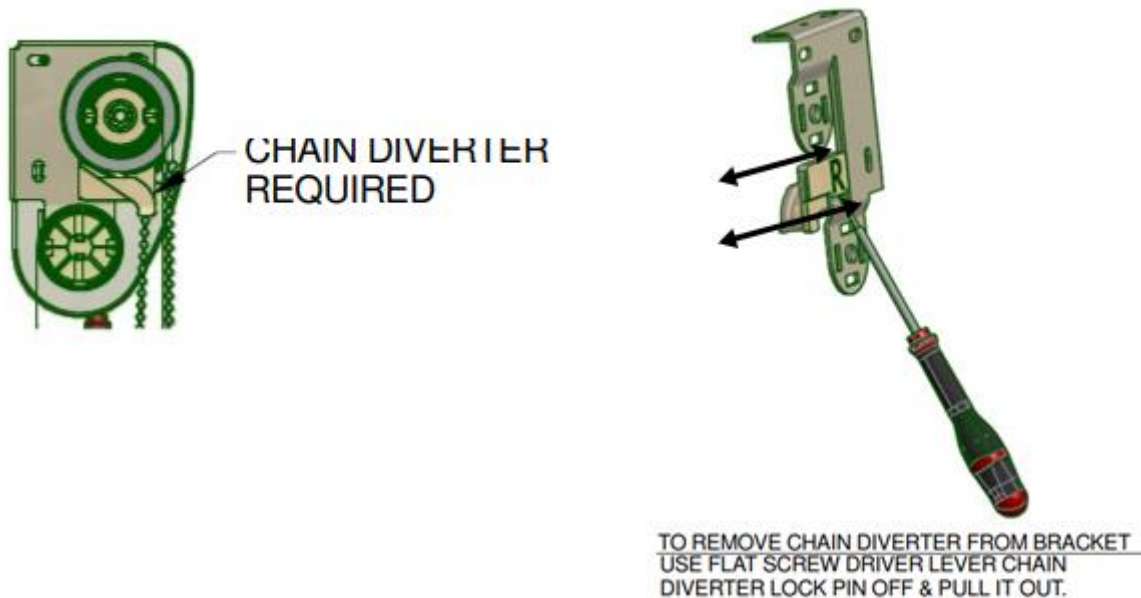

The over rolled Blockout Blind must sit on the top front slot, the bottom blind can be either under or over rolled.

3. Install Child Safety Device – **Important**

Make sure the child safety devices are installed correctly, one will be included for each blind (2 in total)

The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the tension device that is attached to the shade's control cord, to the window frame or wall, so that young children cannot pull the cord around their necks. **The cord must not form a loop equal to or greater than 220mm, less than 1600mm from the floor level.**

The cord retaining device must be installed at the maximum vertical distance possible from the control mechanism to prevent looped cord(s) becoming too slack. Place retaining device on the architrave and mark the position of the hole using a pencil. Attach retaining device, if fixing into plaster or brick ensure you are using the appropriate plugs, anchors or screws if fixing into plaster or brick otherwise the device could come loose defeating its purpose. Ensure the device is fully closed.