


## Measuring for Custom Soft Padded Pelmet

Your Measurements are covered\* by our **SureFit™ Guarantee**

If you need to ask any questions, call, talk with us via live chat, or send us an e-mail, we'll be happy to help

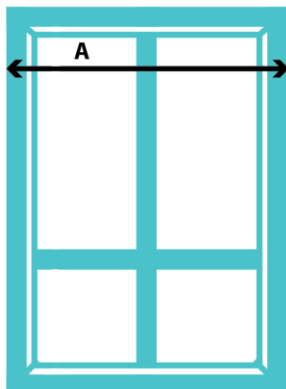

### 1. Determine the Width

Make sure there is enough space on either side for the Pelmet to go past.

#### If measuring for Pelmet over any Recess Fit Blind

A. Measure the width in mm from the outer edge of the architrave to the opposite edge, and **then:**

**Add 60mm** to your above total width measurement, so that the pelmet will go past your architrave by 30mm on each side

#### If measuring for Pelmet over any Recess Fit Blind on a window without architraves

A. Measure the width in mm of the opening, and **then:**

**Add 60mm** to your above total width measurement, so that the pelmet will go past your window opening by 30mm on each side

#### If measuring for Pelmet over a Face Fit Blind

If ordering for over a face fit blind, measure the exact width in mm of the blind from end bracket to end bracket. If you are ordering your pelmet together with a new face fitted blind then this should be the same width measurement you entered on that product, **then:**

**Add 60mm** to your above width measurement, so the pelmet will go past each side by 30mm

### 2. Choose the Projection size on Order Page

The projection is how far into the room the pelmet will project from the wall, we make it easy to determine the projection by offering 5 set values to choose from on the order page, if you are placing more than one pelmet on the same wall it's best to have the same projection size for all of them:

#### 80mm

This projection option can be chosen for over **any Recess fitted Blind**

#### 100mm

This projection option is our most popular choice over **any Recess fitted Blind, Face Fit Single Roller Blind, or face Fit Slimline 25mm Aluminum Venetian**

#### 120mm

This projection option is perfect for over any **Roman Blind, any face fit Single Roller Blind, or any face fit Venetian Blind,.**

#### 150mm

This projection option is perfect for over any **Double Roller Blind**

#### 200mm

This projection option is perfect for over **a face fit Vertical Blind**

## Custom Soft Padded Pelmet Measuring Worksheet

Room Name	Fabric Range	Fabric Colour	Pelmet Width (mm)	Pelmet Projection Size (80mm, 100mm, 120mm, 150mm, 200mm)	Notes

# Measuring points to remember

1. Always use a **metal tape measure**, a cloth tape measure will not be accurate
2. We require all of your measurements in **millimetres**
3. Measure **width then drop** in this order, try not to get these mixed up
4. Measure every window, there might be slight variations even if they are duplicate windows and this could affect your window furnishings fitting perfectly
5. Do not take your measurements from house plans as they are not accurate
6. If measuring with a partner, make sure the measurements are repeated out loud as they are written down
7. Double, and triple check all details are correct before ordering to avoid delays if we have to replace any of your products, **remember not to deduct anything off any Recess Fit measurements** as our factory will do this to ensure a perfect fit
8. For your reference, architraves are the timber frame or otherwise known as window trims around your window opening