



1. Choose Recess or Face Fit

A Recess Fit (Inside Mount) fits on the inside of the window casing. A Face Fit (Outside Mount) hangs on the architrave above the window, or on the wall above the window. We recommend a Recess Fit whenever possible.

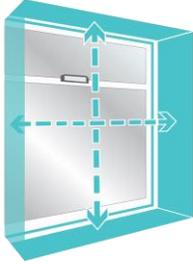

Choosing Recess Fit

Give your window a clean, simple look
Highlight attractive window architraves
Make your windows appear slimmer and your walls more spacious

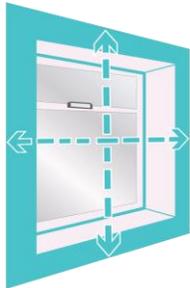

Choosing Face Fit

Most popular mount type for Verticals
Minimise light gaps and offer more privacy
Make your window appear larger
Hide windows that are crooked or unattractive
Clear obstructions in the window recess (like winders, knobs, etc) that would interfere with a Recess Fit

2. Measuring for Vertical Blinds

Your Measurements are covered* by our **SureFit™ Guarantee**

If you need to ask any questions, call, talk with us via live chat, or send us an e-mail, we'll be happy to help


Recess (Inside Fit) Vertical Blinds

First, determine if you have enough **depth** to mount the blind.

100mm is Sufficient for our 89mm Slat **Vertical Blinds**, the **minimum is 65mm** however your slats will protrude when open but will not detract from the product

135mm is Sufficient for our 127mm Slat **Vertical Blinds**, the **minimum is 80mm** however your slats will protrude when open but will not detract from the product

Watch out for any obstructions within the recess such as window winders, knobs, handles, etc. most window winders would not pose a problem as when the slats are open they should be able to slot around them easily, the same is also true when the slats are closed as the blinds will not project as much into the recess. Our Vertical Blinds also do not have connecting chains at the bottom for a much more stylish finish so they cannot get caught. Some window winders are also able to be folded in on themselves to create more space.

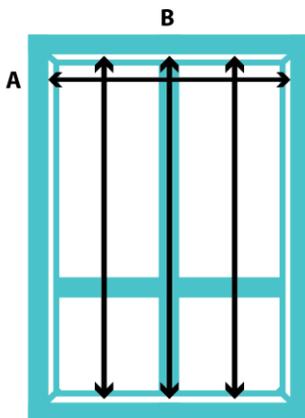


A. Measure the width in mm on the inside of the window frame from left side to right side. Make sure to measure at the top of the reveal and not the bottom of the window, as this is where your track will be mounted

B. Measure the drop in mm from the top of the inside recess to the base of the inside sill or floor. Measure in 3 places – Left, Centre and Right and take the smallest of the three measurements

Important **DO NOT** make any deductions or allowances on your **Recess Fit** measurements as our factory will do this to ensure a perfect fit

Vertical Blind Measuring Instructions

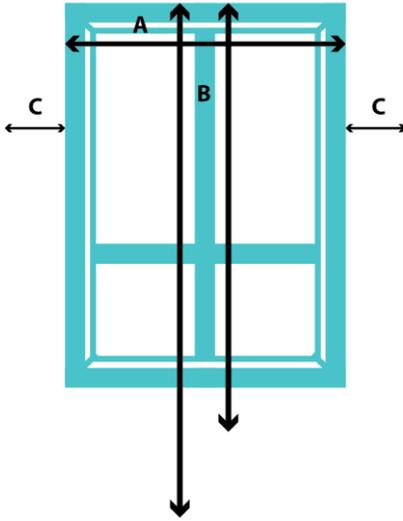

finish, add at least 70-100mm to allow the blind to be mounted above the opening.

Face (Outside Fit) Vertical Blinds

Watch out for any obstructions such as a protruding window sill, desk, beds, et cetera when deciding where your blind will drop too
For Face Fit, we will make your blind including tracks to your exact measurements you give us

- A. Measure the width in mm from the outer edge of the architrave to the opposite edge
- B. Measure the drop in mm from the top of the architrave to where you want the blind to finish

For shorter drop windows

On shorter drop windows, If you do not have a protruding window sill base we recommend that you take the blind 50-100mm below the sill

For full length windows we recommend you measure to 10mm off the floor

- C. We recommend that you add 40-100mm on each side of the architrave (80-200mm total) to your width measurement in step A. This will help reduce the gap at the side of the blind providing better light control and more privacy

If you do not have Architraves around your Window

- A. Measure the width of the opening and add at least 120mm, this will allow more privacy and light control
- B. Measure the drop from the top of the opening to where you want your blind to

Measuring points to remember

1. Always use a **metal tape measure**, a cloth tape measure will not be accurate
2. We require all of your measurements in **millimetres**
3. Measure **width then drop** in this order, try not to get these mixed up
4. Measure every window, there might be slight variations even if they are duplicate windows and this could affect your window furnishings fitting perfectly
5. Do not take your measurements from house plans as they are not accurate
6. If measuring with a partner, make sure the measurements are repeated out loud as they are written down
7. Double, and triple check all details are correct before ordering to avoid delays if we have to replace any of your products, **remember not to deduct anything off any Recess Fit measurements** as our factory will do this to ensure a perfect fit
8. For your reference, architraves are the timber frame or otherwise known as window trims around your window opening