


### 1. Choose Recess or Face Fit

A Recess Fit (Inside Mount) fits on the inside of the window casing. A Face Fit (Outside Mount) hangs on the architrave above the window, or on the wall above the window. We recommend a Recess Fit whenever possible.

#### Choosing Recess Fit

- Number one mount type chosen, higher aesthetics than face mounted
- Give your window a clean, simple look
- Highlight attractive window architraves
- Make your windows appear slimmer and your walls more spacious

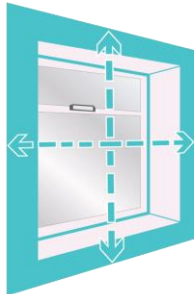


#### Choosing Face Fit

- Minimise light gaps and offer more privacy
- Make your window appear larger
- Hide windows that are crooked or unattractive
- Clear obstructions in the window recess (like winders, knobs, etc) that would interfere with a Recess Fit

## 2. Measuring for 25mm Aluminium Venetian Blinds

If you need to ask any questions, call, talk with us via live chat, or send us an e-mail, we'll be happy to help

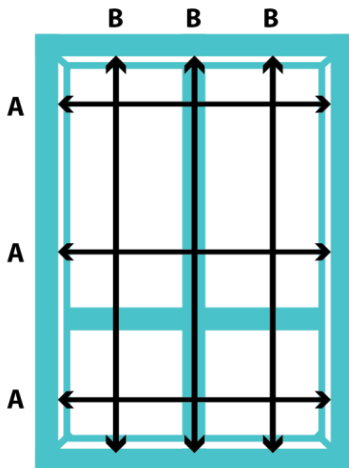

### Recess (Inside Fit) 25mm Aluminium Venetian Blinds

First, determine if you have enough **depth** to mount the blind.

**60mm** is Sufficient, less will result in the blind protruding out of the recess..

Watch out for any obstructions within the recess such as window winders, knobs, handles, etc.


**A.** Measure the width in mm on the inside of the window frame from left side to right side in three places (Top, Centre, Bottom) and use the smallest of the three measurements

**B.** Measure the drop in mm from the top of the inside recess to the base of the inside sill in 3 places – Left, Centre, Right and take the smallest of the three measurements

**Important** DO NOT make any deductions or allowances on your **Recess Fit** measurements as our factory will do this to ensure a perfect fit

**Face (Outside Fit) 25mm Aluminium Venetian Blinds**

Watch out for any obstructions such as a protruding window sill, desk, beds, et cetera when deciding where your blind will drop too. For Face Fit, we will make your blind including brackets to your exact measurements you give us.

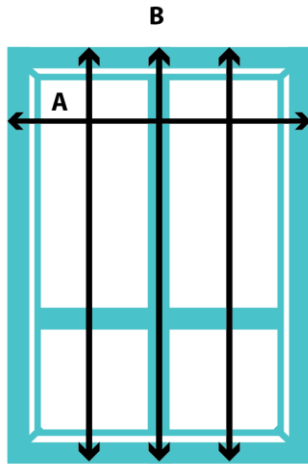

- A.** Measure the width in mm from the outer edge of the architrave to the opposite edge
- B.** Measure the drop in mm from the top of the architrave to where you want the blind to finish in 3 places – Left, Centre, Right and take the smallest of the three measurements
- For shorter drop windows** we recommend that you take the blind 50-100mm below the sill
- For full length windows** we recommend that you measure to 15mm off the floor

**If you do not have Architraves around your Window**

- A.** Measure the width of the opening and add 30-100mm to allow the blind to go past the opening, this will provide better light and privacy control
- B.** Measure the drop of the opening from the top to where you want your blind to finish, in 3 places – Left, Centre, Right and take the smallest of the three measurements
- For shorter drop windows** we recommend that you take the blind 30-100mm below the sill
- For full length windows** we recommend that you measure to 15mm off the floor
- Then add 30-100mm** so that the blind can be mounted above the opening