


1. Choose Recess or Face Fit

A Recess Fit (Inside Mount) fits on the inside of the window casing. A Face Fit (Outside Mount) hangs on the architrave above the window, or on the wall above the window. We recommend a Recess Fit whenever possible.

Choosing Recess Fit

- Number one mount type chosen, higher aesthetics than face mounted
- Give your window a clean, simple look
- Highlight attractive window architraves
- Make your windows appear slimmer and your walls more spacious

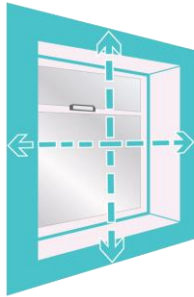


Choosing Face Fit

- Minimise light gaps and offer more privacy
- Make your window appear larger
- Hide windows that are crooked or unattractive
- Clear obstructions in the window recess (like winders, knobs, etc) that would interfere with a Recess Fit

2. Measuring for Timber Venetian Blinds

If you need to ask any questions, call, talk with us via live chat, or send us an e-mail, we'll be happy to help

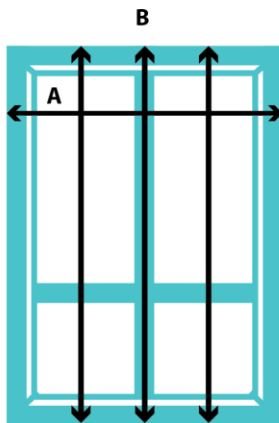

Face (Outside Fit) Timber Venetian Blinds

Watch out for any obstructions such as a protruding window sill, desk, beds, et cetera when deciding where your blind will drop to
For Face Fit, we will make your blind including brackets to your exact measurements you give us

A. Measure the width in mm from the outer edge of the architrave to the to the opposite edge

B. Measure the drop in mm from the top of the architrave to where you want the blind to finish in 3 places – Left, Centre, Right and take the smallest of the three measurements

For shorter drop windows we recommend that you take the blind 30-100mm below the sill

For full length windows we recommend that you measure to 15mm off the floor

If you do not have Architraves around your Window

A. Measure the width of the opening and add 30-100mm to allow the blind to go past the opening, this will provide better light and privacy control

B. Measure the drop of the opening from the top to where you want your blind to finish, in 3 places – Left, Centre, Right and take the smallest of the three measurements

For shorter drop windows we recommend that you take the blind 30-100mm below the sill

For full length windows we recommend that you measure to 15mm off the floor

Then add 60mm so that the blind can be mounted above the opening

Recess (Inside Fit) Timber Venetian Blinds


First, determine if you have enough **depth** to mount the blind.
80mm is Sufficient, less will result in the blind protruding out of the recess.

Watch out for any obstructions within the recess such as window winders, knobs, handles, etc.

A. Measure the width in mm on the inside of the window frame from left side to right side in three places (Top, Centre, Bottom) and use the smallest of the three measurements

B. Measure the drop in mm from the top of the inside recess to the base of the inside sill in 3 places – Left, Centre, Right and take the smallest of the three measurements

Important DO NOT make any deductions or allowances on your **Recess Fit** measurements as our factory will do this to ensure a perfect fit

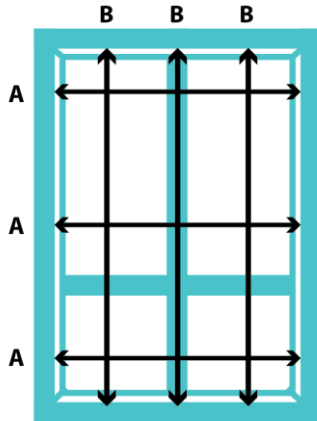

More on window winders and obstructions:

Some window winders have the ability to be collapsed on themselves, creating more space. If your window winder protrudes into your required depth clearance, we recommend face mounting your blind.